

New BloApCo Core Shredders

Handles
paper cores of
any length up to
18" (460mm) diameter with
wall thickness up to 1" (25mm)*



Cores being conveyed into shredder. NOTE: Shredder can be placed in-line with baler, as shown here, or 90° to baler.



Rear view showing shredder and baler. NOTE: Entire unit is self-contained, needs no special air handling equipment.






Features:

- Fast! Simply place scrap material on feed belt. No cutting or fitting needed to get cores into baling chamber.
- Specially designed core crusher feeds cores into shredder.
- Capacity up to 20,000 lbs. (9000kgs) per 8 hr. shift — dependent on baler.
- Patented BloApCo pierce and tear shredding action produces small irregular pieces for easier baling and tighter bales.
- Safety overweight plate, built into in-feed conveyor, stops the conveyor and shredder if anyone attempts to get on the conveyor.
- Quiet. Produces minimum dust. Permits placing shredder near core winders so shop scrap and out-of-spec cores can be fed directly into the shredder.

Options:

- **Bale Transfer Unit** For fully automatic systems utilizing a continuous baler. Bale Transfer Unit grips bale, pulls it forward to "break" it away from following bale, and then pushes it sideways onto roller conveyor.
- **Water Mists** Three types available. Mists help control dust and improve baleability of product.
- **Other Sizes Available** Shredders capable of handling cores up to 30" (760mm) in diameter.

**Dependent upon material*

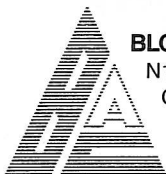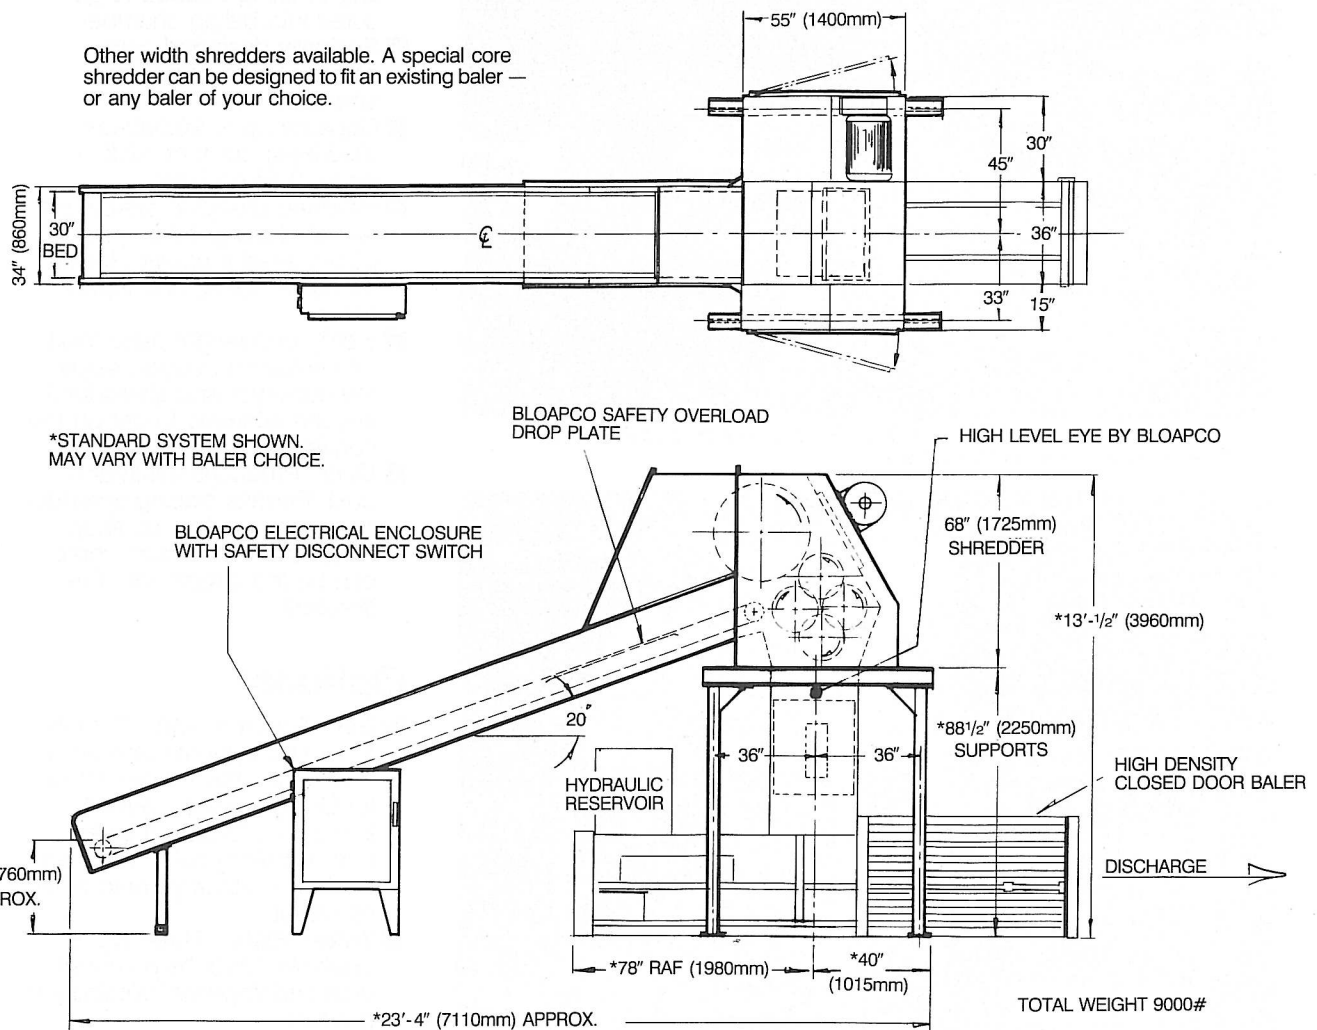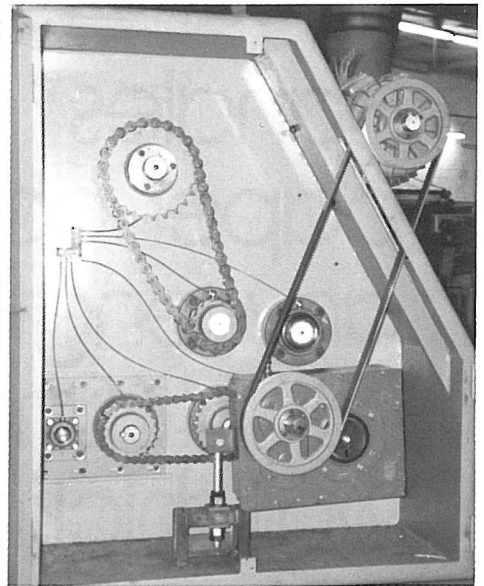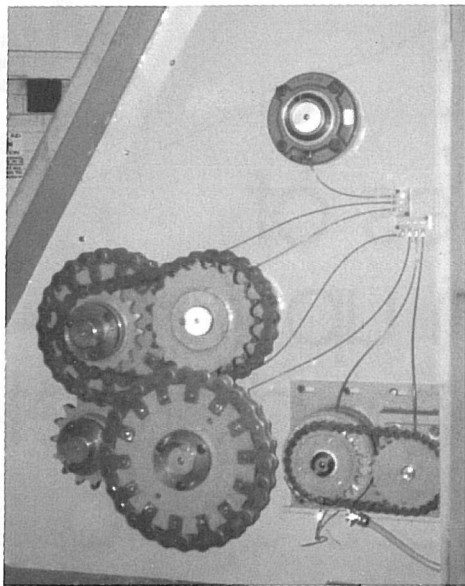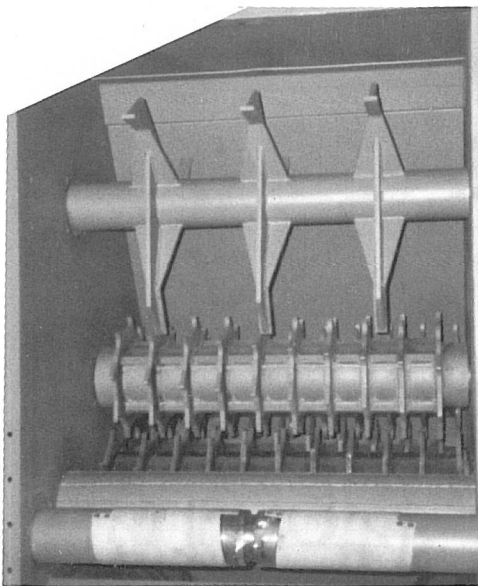

BLOWER APPLICATION COMPANY

N114 W19125 CLINTON DRIVE
GERMANTOWN, WISCONSIN 53022-9987

PHONE: (414) 255-5580

FAX: (414) 255-3446