

Hi-5 touch screen HMI Now available on all BloApCo Shredders!

Upgrade to one central control panel for operation and advanced system diagnostics


- Complete performance data – real time and over any historical period. Track and monitor:
 - Motor amperage usage
 - Safety switches
 - Alarm logs
 - Material overloads
- Enhanced system protection:
 - Create lifetime preventive maintenance schedules through accurate and timely system information
- Simple, touch screen, graphical operational control
- Pushbutton redundancy in case of panel damage
- High-performance processors, high-resolution displays and high flash and dynamic memory



Traditional Pushbuttons

Upgrade
From
This


To
This

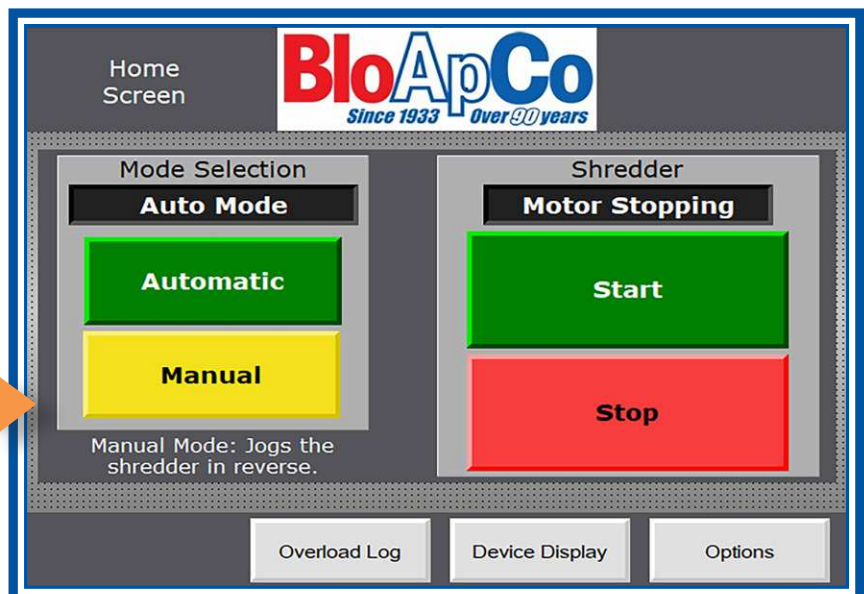


HI-5 HMI Control Display

- Easy one-touch machine start
- Straightforward user interface


Improve Shredder Performance

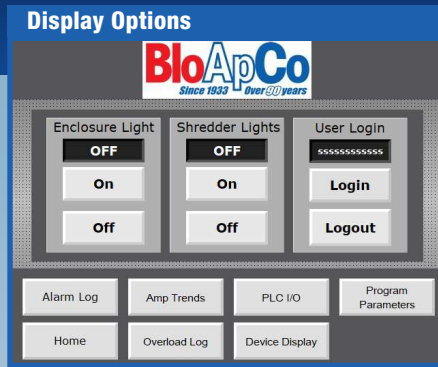


- Portal to all display options and HMI functions
- Operators can change parameters and reset the safety alarms

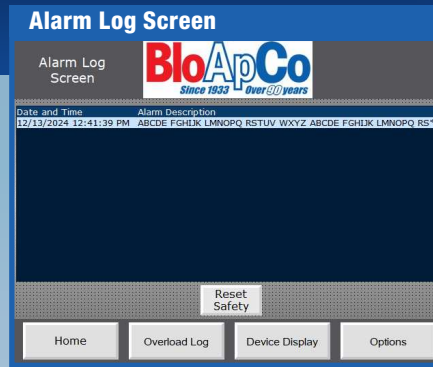


- Displays all preset alarms
- Operators must login to reset safeties and restart shredder

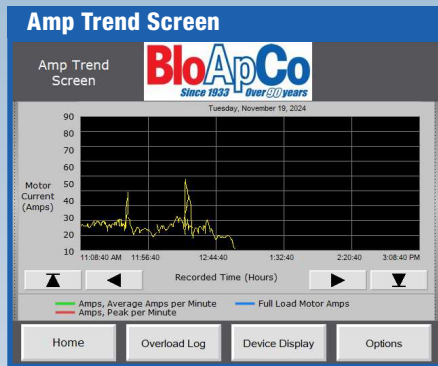


- View amp usage during operation
- Displays 4-hour segments of data collection at a time

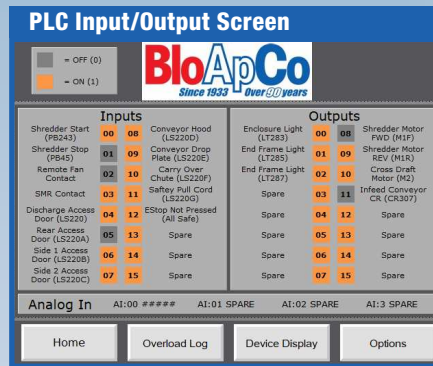


- Display which inputs and outputs are on or off
- Realtime monitoring of I/O performance

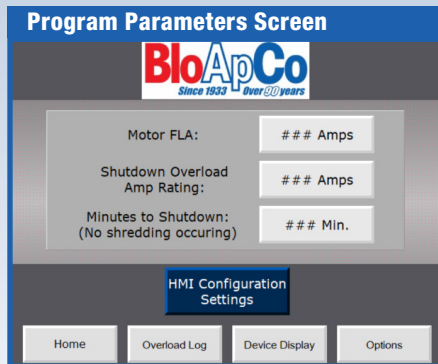


- Set motor FLA, normal running amp load and minutes to shutdown
- Create preventative maintenance tasks from machine runtime

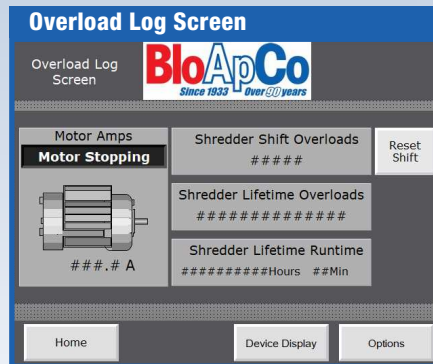

- Displays status of amp usage, number of overloads and runtime
- Access to real time data improves system performance

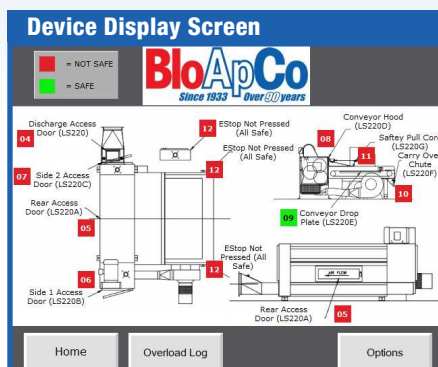

- Displays status of limit switches and E-stops
- Instantly see what caused the machine to stop

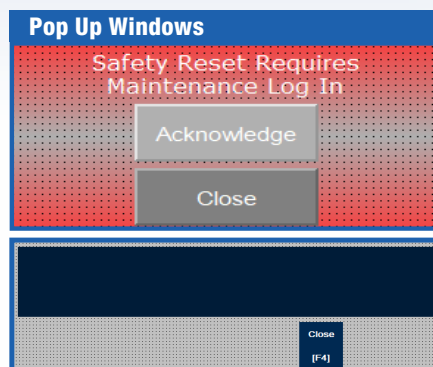

- Alarm will display if an overload is registered, an E-stop is pressed, or a limit switch is tripped/opened
- Warning will display when a safety device has tripped but a safety reset has not been completed

