


# ROTOR CONFIGURATIONS

## PRECISION-MATCHED ROTORS FOR EVERY MATERIAL CHALLENGE

The Titan Series high-speed granulators offer multiple rotor configurations, selected at the time of equipment purchase to achieve optimal performance for your specific application. Each rotor style is engineered for a distinct range of materials and hardness levels.

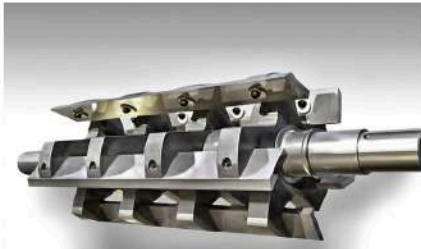

### ■ R-ROTOR

Best suited for pulverizing hard pipe, wire, thick-wall materials, and sheets.



### ■ V-ROTOR

Well suited for pulverizing PET bottles, general pipe, tubing, film, and similar materials.



### ■ S-ROTOR

Suited for pulverizing very hard materials such as rubber block, thick-wall pipe, thick board, and power cable, fine RDF pulverizing (20-30mm).



### ■ K-ROTOR

Suited for secondary pulverizing treatment of any material other than metallic material.